

Easy & Powerful

## **2D PROGRAMMING**

---

**QUICK GUIDE**

Version Information



Set All Default



## Interface Selection

RS232



USB



VCOM



## Reading Mode Selection

### Trigger mode

#### Applicable model:

Handheld IG8xx, IG38x, IG740, IG640 series.

Good Read OFF



Trigger ON/OFF



## Auto Sense and Presentation mode

#### Applicable model:

Desktop LYRA / NOVA series,  
Fixed mount FI340, FI740, MICA M-9084i or MIR4  
modules

#### Auto Sense

illumination is off after decode;  
Aimer always off



<Default> for fixed mount and MIR4 series.

### **Applicable model:**

Desktop LYRA/ NOVA series.

Fixed mount FI series, MICA M-9084i or MIR4 modules

### **Presentation**

illumination is on for a while after decode;

Aimer always off



**<Default>** for LYRA and NOVA series.

### **Applicable model:**

FI series, MICA M-9084i or MIR4 modules

### **Auto Sense with aimer on**

illumination is off after decode;

Aimer is always on



**<Default>** for MICA M-9084i.

# Select Terminator

<CR+LF>



CR



HT (TAB)



None



## Setup Baud Rate

9600



19200



<115200>



## Symbology Selection

< UPC-A ON >



UPC-A OFF



<UPC-E ON>



UPC-E OFF



<EAN-13/JAN-13/

ISBN-13 ON>



EAN-13/JAN-13/

ISBN-13 OFF



<EAN-8/JAN-8 ON>



EAN-8/JAN-8 OFF



<CODE 39 ON>



CODE 39 OFF



<CODE 128 ON>



CODE 128 OFF



**<CODABAR/NW7 ON>**



**CODABAR/NW7 OFF**



**<Interleaved 25 ON>**



**Interleaved 25 OFF**



**GS1 Data Bar-  
Omni directional ON**



**<GS1 Data Bar-  
Omni directional OFF>**



**GS1 Data Bar-  
Limited ON**



**<GS1 Data Bar-  
Limited OFF>**





GS1 Data Bar-  
Expanded ON



<GS1 Data Bar-  
Expanded OFF>



<QR Code ON>



QR Code OFF



<PDF417 ON>



PDF417 OFF



<Data Matrix ON>



Data Matrix OFF



Micro QR ON



<Micro QR OFF >



Aztec ON



<Aztec OFF>



Micro PDF417 ON  
(Optional)



<Micro PDF417 OFF>



Select All Barcodes



## Send Character by ALT Method

Enable



<Disable>



## Bluetooth Configuration (for BT Scanner)

Set BT Parameter Default



## BT Profile

<SPP Master Mode>



SPP Slave Mode



HID Slave Mode



## Firmware Version (for BT Scanner)

Scanner Firmware Version

Cradle Firmware Version



Scanner MAC Address

Cradle MAC Address



For more information regarding detailed specification, user's manuals, full configuration guide, drivers, utility, etc., please visit our website.