

Easy & Powerful

2D PROGRAMMING

QUICK GUIDE

Version Information



Set All Default



Interface Selection

RS232



USB



VCOM



Reading Mode Selection

Good Read OFF



Trigger ON/OFF



Auto Sense



Select Terminator

<CR+LF>



CR



HT (TAB)



None



Setup Baud Rate

9600



19200



<115200>



Symbology Selection

< UPC-A ON >



UPC-A OFF



<UPC-E ON>



UPC-E OFF



**<EAN-13/JAN-13/
ISBN-13 ON>**



**EAN-13/JAN-13/
ISBN-13 OFF**



<EAN-8/JAN-8 ON>



EAN-8/JAN-8 OFF



<CODE 39 ON>



CODE 39 OFF



<CODE 128 ON>



CODE 128 OFF



<CODABAR/NW7 ON>



CODABAR/NW7 OFF



<Interleaved 25 ON>



Interleaved 25 OFF



**GS1 Data Bar-
Omni directional ON**



**<GS1 Data Bar-
Omni directional OFF>**



**GS1 Data Bar-
Limited ON**



**<GS1 Data Bar-
Limited OFF>**



GS1 Data Bar-
Expanded ON



<GS1 Data Bar-
Expanded OFF>



<QR Code ON>



QR Code OFF



<PDF417 ON>



PDF417 OFF



<Data Matrix ON>



Data Matrix OFF



Micro QR ON



<Micro QR OFF >



Aztec ON



<Aztec OFF>



Micro PDF417 ON
(Optional)



<Micro PDF417 OFF>



Han Xin Code ON
(Optional)



<Han Xin Code OFF>



Grid Matrix Code ON
(Optional)



<Grid Matrix Code OFF>



Select All Barcodes



Send Character by ALT Method

Enable



<Disable>



Bluetooth Configuration (for BT Scanner)

Set BT Parameter Default



BT Profile

<SPP Master Mode>



SPP Slave Mode



HID Slave Mode



Firmware Version (for BT Scanner)

Scanner Firmware Version

Cradle Firmware Version



Scanner MAC Address

Cradle MAC Address



For more information regarding detailed specification, user's manuals, full configuration guide, drivers, utility, etc., please visit our website.