

Easy & Powerful

## **2D PROGRAMMING**

---

**QUICK GUIDE**

Version Information



Set All Default



## Interface Selection

RS232



<USB>



VCOM



## Reading Mode Selection

<Good Read OFF>



Trigger ON/OFF



Continuous/Auto Power On



Auto Sense



## Select Terminator

<CR+LF>



CR



HT (TAB)



None



## Setup Baud Rate

9600



19200



<115200>



## Symbology Selection

< UPC-A ON >



UPC-A OFF



<UPC-E ON>



UPC-E OFF



**<EAN-13/JAN-13/  
ISBN-13 ON>**



**EAN-13/JAN-13/  
ISBN-13 OFF**



**<EAN-8/JAN-8 ON>**



**EAN-8/JAN-8 OFF**



**<CODE 39 ON>**



**CODE 39 OFF**



**<CODE 128 ON>**



**CODE 128 OFF**



**<CODABAR/NW7 ON>**



**CODABAR/NW7 OFF**



**<Interleaved 25 ON>**



**Interleaved 25 OFF**



**GS1 Data Bar**

**Omni directional ON**



**<GS1 Data Bar**

**Omni directional OFF>**



**GS1 Data Bar**

**Limited ON**



**<GS1 Data Bar**

**Limited OFF>**



GS1 Data Bar

Expanded ON



<GS1 Data Bar

Expanded OFF>



<QR Code ON>



QR Code OFF



<PDF417 ON>



PDF417 OFF



<Data Matrix ON>



Data Matrix OFF



Micro QR ON



<Micro QR OFF >



Micro PDF417 ON



<Micro PDF417 OFF>



MaxiCode ON



<MaxiCode OFF>



Aztec ON



<Aztec OFF>





HanXin Code ON



<HanXin Code OFF>



Grid Matrix Code ON



<Grid Matrix Code OFF>



Select All Barcodes



## Screen Reading

Enable



<Disable>



## Send Character by ALT Method

Enable



<Disable>



## Bluetooth Configuration

Set BT Parameter Default



## BT Profile

<SPP Master Mode>



SPP Slave Mode



HID Slave Mode



## Firmware Version

Scanner Firmware Version



Cradle Firmware Version



Scanner MAC Address



Cradle MAC Address



For more information regarding detailed specification, user's manuals, full configuration guide, drivers, utility, etc., please visit our website.