


# DEFAULT BARCODE CARD

For Bluetooth Scanners:

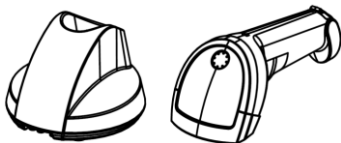

Scan the following 3 programming codes sequentially to restore scanner parameters to factory default settings.

Set BT Parameter Default



#+\$000C\$

Note:

After scanning “Set BT Parameters Default”, wait approximately 20 sec for BT reconnection. Then start to scan “Set Scanner/Cradle Default” followed by “Engine Default”.

Set Scanner/Cradle Default



#\$+/2

Engine Default



V1.1 2015 Dec